



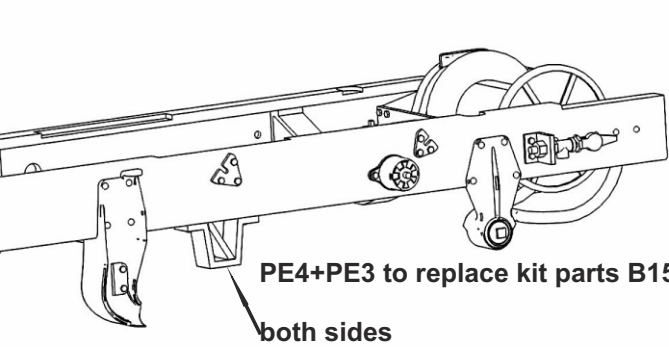


PE4+PE3 to replace kit parts B15
both sides

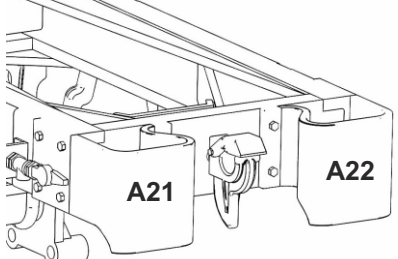


PE1 to replace kit parts A21
A22




2 resin fuel cans + PE c
for handles

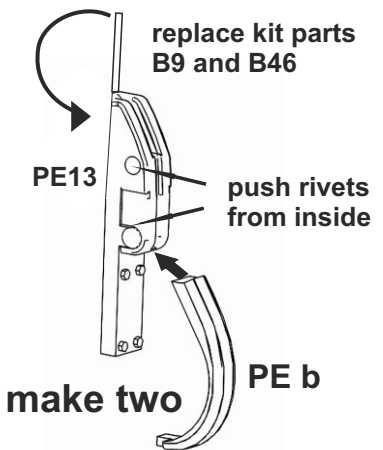

replace kit parts
B9 and B46
PE13
push rivets
from inside
make two
PE b

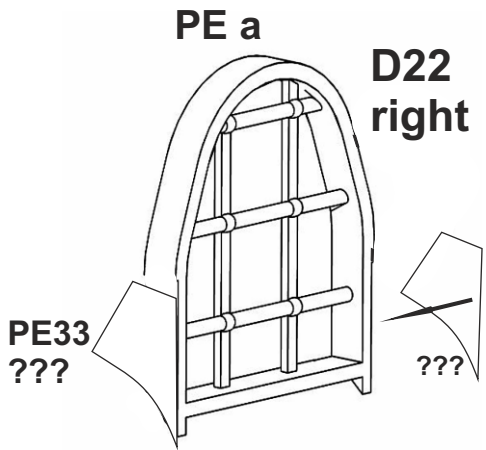


PE a
D22
right
PE33
???

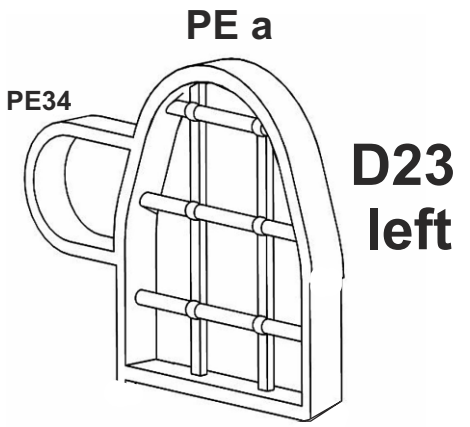


PE a
D23
left
PE34

PE a - shape according to plastic parts to replace D22 and D23
you can assemble light covers on mudguards without use PE33,
if you use PE33, then remove plastic triangles on the mudguards

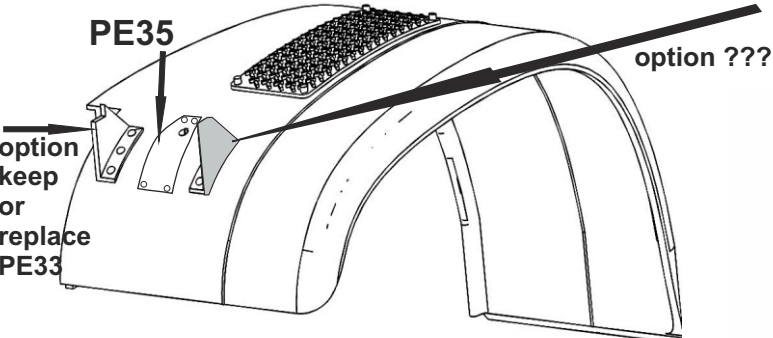


PE35
option keep
or replace
PE33
option ???

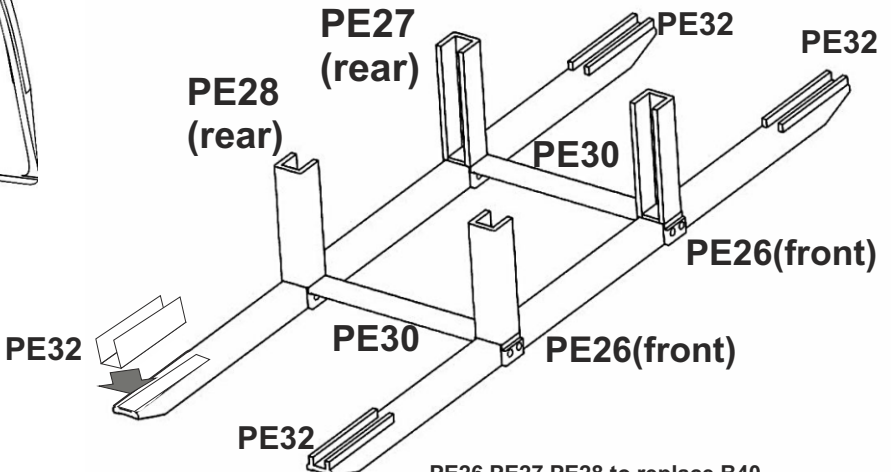

PE27
(rear)
PE28
(rear)
PE32
PE30
PE26(front)
PE32
PE26(front)
PE32


PE26,PE27,PE28 to replace B40
PE29 to replace B39, PE30 to replace
B42

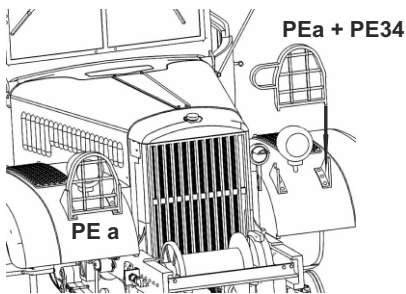

PEa + PE34
PE a




PE21 - bolt heads on top front bumper

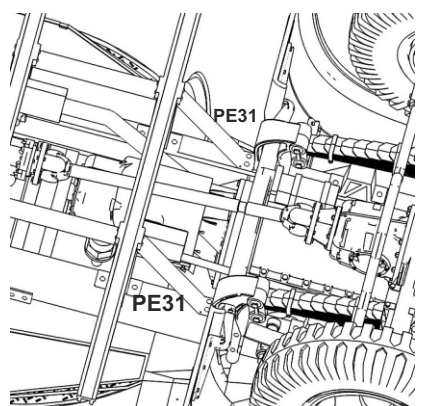


PE31 to replace B43





PE49 to replace B65

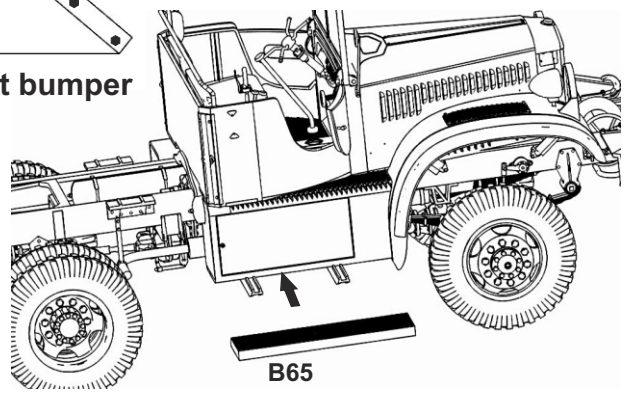




B65

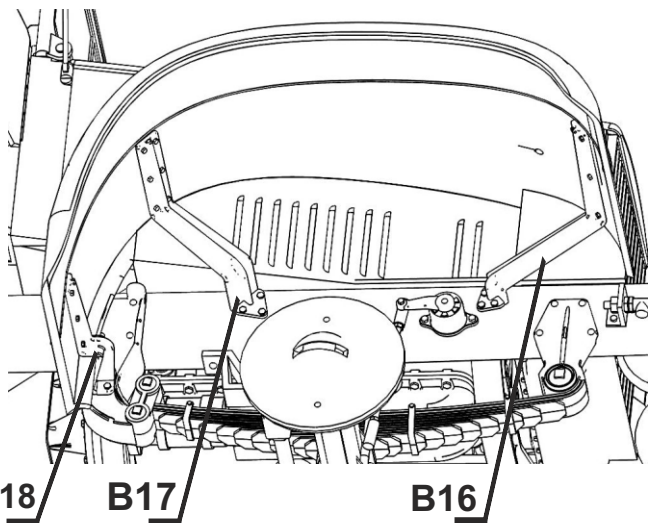

PE7+PE8 to replace B16
PE9+PE10 to replace B17
PE11+PE12 to replace B18
on both sides
push the rivets from inside on PE8, PE10, PE12

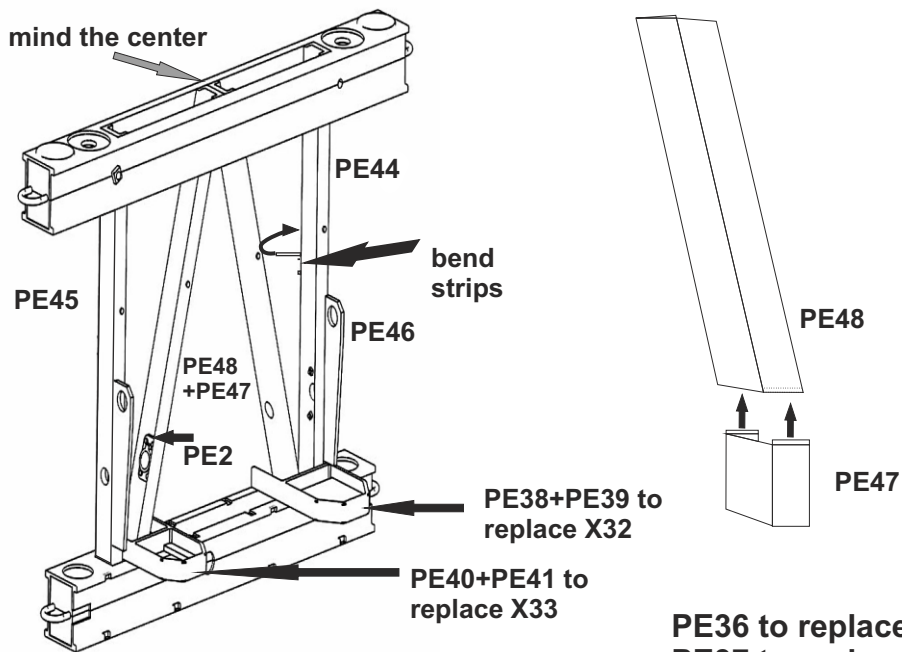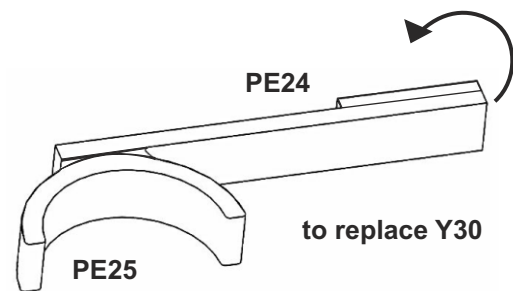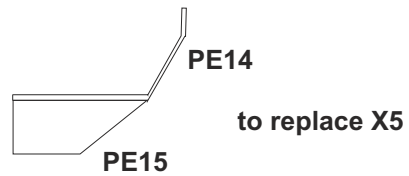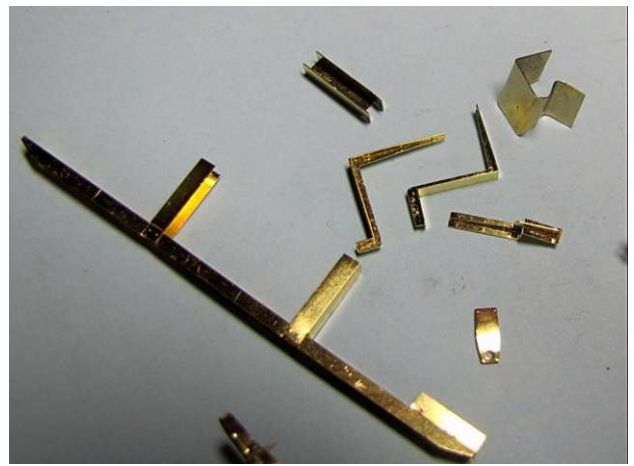

PE36 to replace X34
PE37 to replace X35

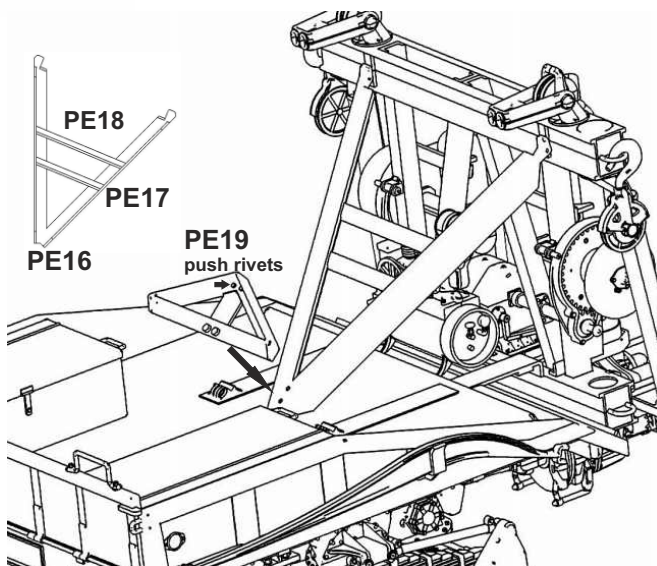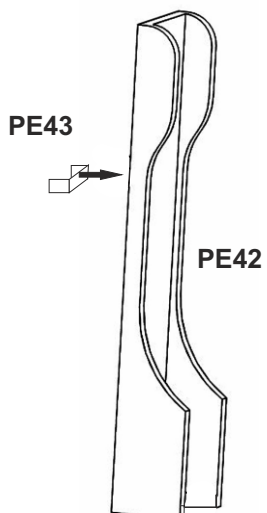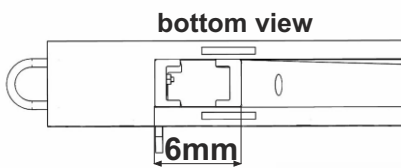

Cab gun mount

